

CONTENTS

MAIN FEATURES ..... 1

OVERVIEW CT-01 ..... 2

MAIN SCREEN ..... 3

INFORMATION MENU \* ..... 4

HIJRI CALENDAR SETTING ..... 9

PRAYER ALARM SETTING ..... 10

CITY SELECTION ..... 11

ADDING NEW CITY ..... 12

TIME & CALENDAR SETTING ..... 13

DAILY ALARM SETTING ..... 14


TAQWEEM SELECTION ..... 15

FREQUENTLY ASKED QUES ..... 16


\* Main Screen, Hijri Calendar, Azans, City Select Setting Time & Calendar, Alarm, Language Selection, Calendar Select, Temperature Display, Time Format, Azan Display, Azan ON/OFF Control, Taqweem, Azan Saftay, DST Selection, Qibla, Moon Age, Website, and Battery Level.

MAIN FEATURES 1

- Azan sound in different voices
- Azan times for all cities around the world
- Daily alarm with Weekend setting
- Prayer Alarms, adjusted automatically daily
- Arabic / English languages ( ENG عربي )
- Hijri and Gregorian calendars
- Temperature display °C / °F
- Daylight saving time option (Automatic)
- Low battery indicator
- Qibla direction (relative to North)
- Moon age in day & hours
- Micro USB power socket

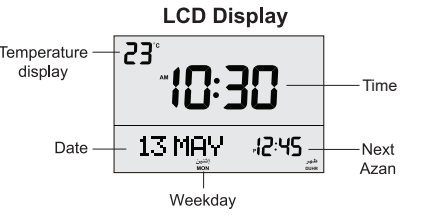


OVERVIEW CT-01 2

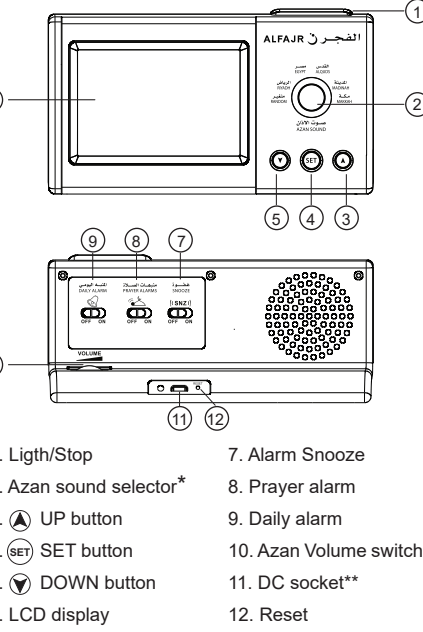

\* Note: To select one of the five azan sounds, press and hold the "azan selector" button (2).

\*\* Note: When the clock is powered with the DC socket, the azan volume will become louder.

MAIN SCREEN 3

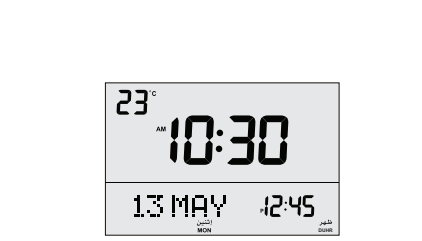

The Main Screen: displays current time, next azan, date (Gregorian or Hijri), and temperature.

Press (UP) to next screen.

Press (DOWN) to previous screen.

After moving to desired screen, press & hold (SET) to enter its setting mode.

INFORMATION MENU 4

	The Main Screen: displays current time, next azan, date (Gregorian or Hijri), and temperature. Press (UP) to move to the following screens.
13 SHAJWAL 1440	This screen shows the hijri calendar. To adjust hijri calendar (if needed), press & hold (SET), see page 9.
-6:28 TO FAJR 5:16	This screen displays the next prayer time & the time remaining to next azan. In this example, -6:28 means fajn azan is after 6 hours & 28 minutes.
6:33 SHUROQ	This screen displays Shuroq time. Also from this screen, you can set Shuroq alarm.
12:32 DHUHR	Dhuhr azan time. Also from this screen, you can set Dhuhr alarm.

INFORMATION MENU (Cont.1) 5

3:56 ASR	Asr azan Time. Also from this screen, you can set Asr alarm.
6:29 MAGRIB	Magrib azan Time. Also from this screen, you can set Magrib alarm.
7:59 ISHA	Isha azan time. Also from this screen, you can set Isha alarm. After waiting for few seconds, the clock will display the "Midnight" time.
5:16 FAJR	This screen displays Fajn azan time. Also from this screen, you can set Fajn alarm. In this screen, and after waiting for few seconds, the clock will display the beginning time of "the last third of the night".

NOTE To set any prayer alarm, see page 10.

INFORMATION MENU (Cont.2) 6

CITY	From this screen you can select your city (see page 11).
12:30 TIME	In this screen you can adjust the time and calendar (see page 13).
ALARM	In this screen you can adjust the alarm (see page 14).
ENG عربي	Language selection: English or Arabic.
CALENDAR	To display either the Gregorian calendar or Hijri calendar on the main screen.
TEMPERA	The clock displays the temperature in degrees Celsius (°C), and can be changed to Fahrenheit (°F).
FORMAT	You can select either 12 hours (AM/PM) or 24 hours time format. Also, you can display time with or without seconds.

INFORMATION MENU (Cont. 3) 7

AZAN DI	On the main screen, the clock display the "Prayer Interval" (to 30 minutes) after azan. From this screen you can change this option, to always display "Azan time".
AZAN ON	From this screen you can disable or enable azan sound of any of the five azans, independently. For exampl: if you wish to disable Dhuhr azan sound (because no one is at the home that time), enter the setting here and use (DOWN) & (UP) to set Dhuhr sound "OFF". The clock will play the other four azans only.
TAQWEEM	The clock uses the local (or the most widely used) taqweem system in your city. As needed, other taqweem systems can be selected (see page 15).
SAFETY	If required, azan times can be adjusted forward or backward by a fixed numbre of minutes.

INFORMATION MENU (Cont. 4) 8

DST	Daylight Saving Time (DST) selection. When DST is ON, all azan times and current time are advanced by one hour. In Europe & North America this clock automatically adjust the DST (Auto DST).
182° QIBLA	This screen displays the Qibla direction (relative to North). In this example qibla is 182° from north. i.e. south direction.
13d 9h MOON AGE	This screen displays the Moon age (in days "d" and hours "h"). In this example, the moon age is 13 days and 9 hours.
WWW.ALF	website : <a href="http://www.alfajr.com">www.alfajr.com</a>
BATTERY	This screen displays the battery level. To display battery level in Volts, press & hold (SET).

HIJRI CALENDAR SETTING 9

To change Hijri (or Gregoian) date\*, press (UP) once to reach Hijri screen, then follow the steps below:

13 SHAJWAL 1440	Press & hold (SET) to enter setting.
13 DAY	Use (DOWN) or (UP) to adjust day then press (SET)
SHAJWAL	Use (DOWN) or (UP) to adjust month then press (SET)
1440 YEAR	Use (DOWN) or (UP) to adjust year then press (SET)

\* To set Gregorian calendar see page 13.

NOTE After changing the Hijri date, the Gregorian date will not change. But, after setting the Gregorian date\*, the Hijri date is automatically adjusted according to the astronomical moon sighting at Makkah.

PRAYER ALARM SETTING 10

Prayer alarm are useful for Iqama or prayer time. Each prayer alarm can be set to ring before or after the azan time by a fixed interval.

Example: To set Asr prayer alarm to always ring after the azan by 10 minutes, follow the steps below:

	Turn ON the prayer alarm switch (behind the clock). Note: The icon (mosque) will be displayed on the LCD*.
3:24 ASR	Move to Asr screen, then press & hold (SET) to enter setting
10 ASR ALM	Use (DOWN) or (UP) to adjust number of minutes (before or after the azan), or OFF, then press (SET)
1 TONE #	Use (DOWN) or (UP) to select a different pre-alarm tone, then press (SET) The pre-alarm tone is played at beginning of each alarm.

NOTE In the default setting, all prayer alarms are set OFF.

\* When the prayer alarm switch in turned OFF, all prayer alarms will be disabled.

CITY SELECTION 11

To select any city in the clock, press (UP) several times to reach CITY screen, then press and hold (SET) to start setting, then:

UAE	Use (DOWN) or (UP) to select your country* then press (SET).
DUBAI	Use (DOWN) or (UP) to select your city* then press (SET).

\* If your country or city are not listed, refer to page number 12.

NOTE After change the city, the time and the new azan times of the new city will be adjusted automatically.

NOTE If azan times are not correct, make sure to correctly set: The country and coordinates, Gregorian calendar, DST option, and a suitable taqweem system for your city.

ADDING NEW CITY 12

Any location around the world can be selected using latitude, longitude and GMT infomation.

For example, the following steps show how to set the city of Corvallis, in USA with latitude (44° 34' N) and longitude (123° 16' E), and GMT-8:00 :

1/ From CITY screen, press and hold (SET)

2/ Press (DOWN) or (UP) to select Country "USA" then press (SET)

3/ Press (DOWN) or (UP) to select "NEW CITY" then press (SET)

4/ Adjust latitude (44N), press (SET) and adjust minutes (34), then press.

5/ Adjust longitude (123E), press (SET) and adjust minutes (16), then press (SET)

6/ Adjust GMT(-8:00) then press (SET)

After above setting, this location is stored in the clock, and time of new city and new azan times are recalculated.

For more information please visit: [www.alfajr.com/newcity](http://www.alfajr.com/newcity)

NOTE If azan times are not correct, make sure to correctly set: The country and coordinates, Gregorian calendar, DST option, and a suitable taqweem system for your city.

TIME & CALENDAR SETTING 13

To set the time and Gregorian (or Hijri) date\*, press (UP) several times to reach TIME screen, then press (SET) to start setting, then:

AM 12:30	Use (DOWN) or (UP) to adjust hours then press (SET), notes AM/PM.
AM 12:30	Use (DOWN) or (UP) to adjust minutes then press (SET).
DAY 29	Use (DOWN) or (UP) to adjust day then press (SET).
OCTOBER	Use (DOWN) or (UP) to adjust month then press (SET).
YEAR 19	Use (DOWN) or (UP) to adjust year then press (SET).

\* To set Hijri calendar, see page 9.

SETTING DAILY ALARM 14

The daily alarm is a regular alarm that rings at the same time everyday or specific days.

Setting the daily alarm is shown below:

	Turn ON the daily alarm switch (behind the clock). Note: The icon (alarm clock) will be displayed.
ALARM	Move to ALARM screen, then press & hold (SET)
6:00	Use (DOWN) or (UP) to adjust the alarm hours and minutes, then press (SET)
7 DAYS	Use (DOWN) or (UP) to adjust the specific alarm days (5, 6, 7, or custom days), then press (SET)
1 TONE #	Use (DOWN) or (UP) to select different alarm tone, then press (SET)

NOTE To stop any alarm, you may press STOP button (rather than turning OFF the alarm switch), so the alarm will ring the next day.

NOTE To cancel the snooze, press & hold STOP button. This will also cancel all alarms coming in the next 20 minutes.

TAQWEEM SELECTION 15

Your clock is already programmed to use the local (or the most widely used) taqweem system for your city. But, if you prefer to select another taqweem, follow the steps below:

1/ Press (UP) several time until reach to TAQWEEM

2/ Press and hold (SET) to enter setting mode

3/ Use (UP) or (DOWN) to select the desired taqweem, then press (SET) to confirm

Main Taqweem Systems:

Muslim League

Egypt taqweem

Islamic Society of North America (ISNA)

Islamic Scientific University (Hanafi)

Um Alqura taqweem

Fixed 1:30 (where Isha is 1:30 after Magrib and Fajn 1:30 before Shuroq)

NOTE To change Fajn or Isha azan calculation method, you can select CUSTOM taqweem.

NOTE After re-selecting a country, the clock will be reset to use the country's default taqweem.

FREQUENTLY ASKED QUESTIONS 16

Q: Can other cities be selected in this clock?

A: Yes, any location around the world can be selected, see page 12.

Q: Azan times are not correct. Why?

A: Make sure you have correctly set the following: a) city name, b) Gregorian calendar, c) DST (Daylight saving time option), d) Taqweem system.

Q: Azan times for Fajn, Asr and/or Isha are not correct. Why?

A: There are different methods to calculate these azan times. Make sure to select a suitable taqweem system (see page 15).


Q: Can I set the clock to play Magrib and Isha azan sounds only?

A: Yes, you can play (or not play) any of five azan sounds independently, (thru azan ON/OFF control) see page 7.

Q: How can I restart my clock?

A: To restart the clock, press the RESET button, see page 2.

GUARANTEE

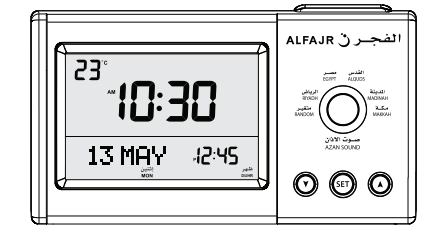

Model: CT-11

هذه الساعة مضمونة لمدة سنتين من تاريخ الشراء، وسوف تصلح أو تستبدل إذا كان العطل ناتج عن التصنيع.

This clock is guaranteed for 2 years from date of purchase. This guarantee cover the defects in material of workmanship.

[support@alfajr.com](mailto:support@alfajr.com)