

FREQUENTLY ASKED QUESTION


- Q:** How can I add my city if it is not listed in the watch?
A: You can set any location around the world by using the latitude and longitude coordinates (see page 12).
- Q:** Azan times are not correct. Why?
A: Make sure you have correctly set your city and the Gregorian calendar. If Azan times are shifted by one hour, make sure to correctly set the **DST** option.
- Q:** Azan times for Fajr, Asr and/or Isha are not correct. Why?
A: There are different methods to calculate these azan times. Make sure to select a suitable taqweem system (see page 13).

INDEX

Setting Time, Calendar & City ... 1	Adding a New City 12
Main Menu 3	Taqweem Selection 13
Advanced Menu * 5	Safety Time Adjustment 14
Setting Hijri Alarms 10	Qibla Direction 15
Setting Prayer Alarms 11	Moon Age 16
* Qibla Direction, City Select, Language Selection, Main Calendar, Time Display, Azan Show, Taqweem, DST Selection, Alarm, Stop Watch, Volume control.	Quran Bookmark 16
	Frequently Asked Question ... 17


Setting Time, Calendar and City

Main Screen

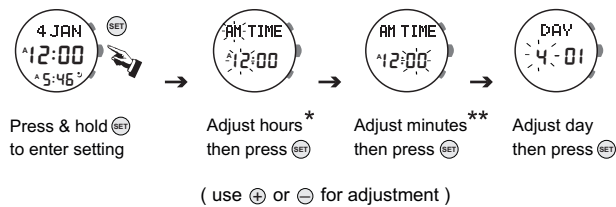

* When setting hours, notice the flashing AM/PM icons.
 ** After changing the minutes, the seconds will restart counting from 00


Setting Time, Calendar, and City (Cont.)

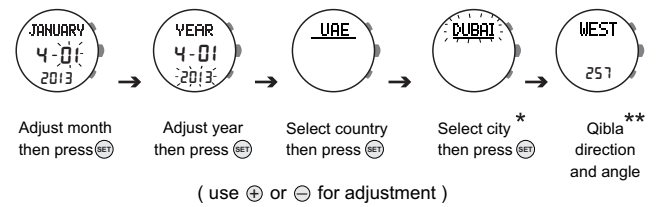

* If your city is not listed, Refer to page 12.
 ** After selecting DUBAI city, the watch displays Qibla direction (WEST) and the Qibla angle (257° clockwise from North direction).


MAIN MENU

Main Screen

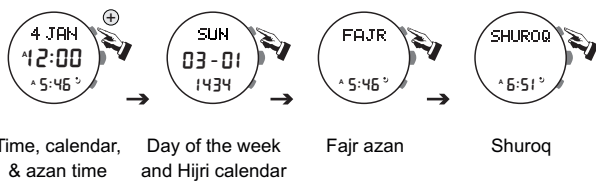

NOTE → To set the time, Gregorian calendar and your city, press and hold (SET) for two seconds at main screen. Similarly, to set Hijri calendar or any prayer alarm, move to the desired screen then press (SET) for two seconds.


MAIN MENU (Cont.)

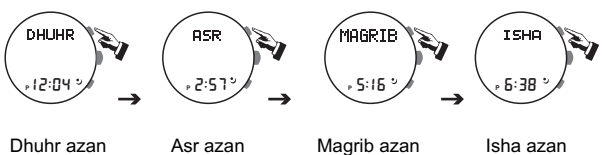

NOTE → The watch will automatically return to the main screen if no button is pressed for few seconds.


5

ADVANCED MENU

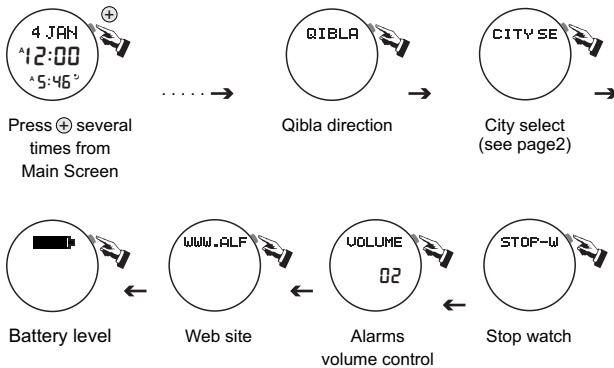


6

ADVANCED MENU (Cont.)

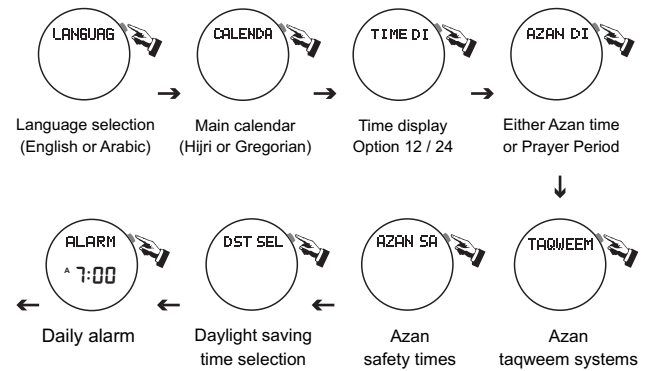


7

ADVANCED MENU DESCRIPTION

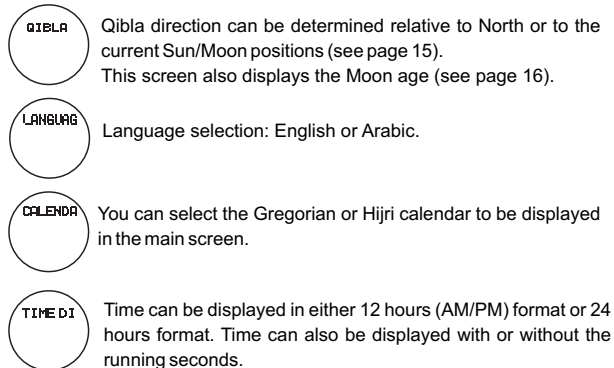


8

ADVANCED MENU DESCRIPTION (Cont. 1)

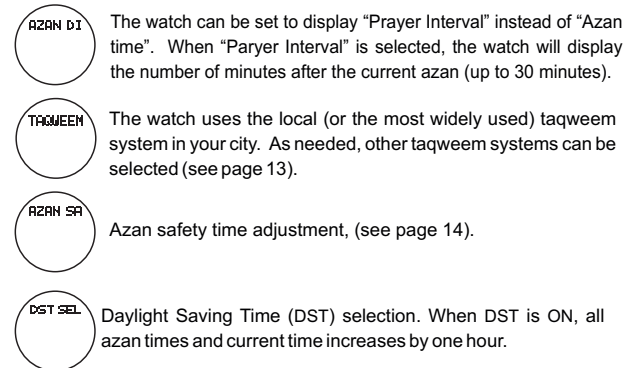

9


ADVANCED MENU DESCRIPTION (Cont. 2)

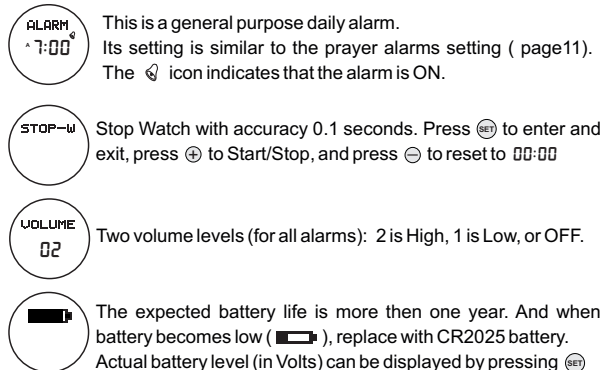

10

SETTING HIJRI CALENDAR

After setting Gregorian date, the Hijri date is automatically adjusted according to the astronomical moon sighting at Makkah. When needed, you can change Hijri date by first moving to Hijri calendar screen (by pressing ⊕), then following the steps below:

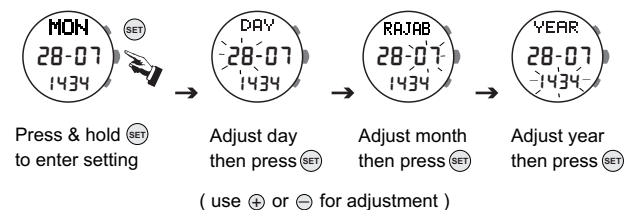

NOTE → Gregorian date is not affected by Hijri date setting.

11

SETTING PRAYER ALARMS

Prayer alarms are useful as reminders of Iqama or Salat time. Each prayer alarm can be set to ring before or after the azan time by a fixed interval. Moreover, each alarm duration can be adjusted (in seconds), or can be turned OFF. The icon ☺ near the azan time indicates that the prayer alarm is ON (for that particular azan).

Example: To set Asr prayer alarm to always ring after the azan by 10 minutes, move to Asr azan screen, then:



NOTE In the watch default setting, each prayer alarm rings exactly at its corresponding azan time.

13

TAQWEEM SELECTION

This watch is already programmed to use the local (or the most widely used) taqweem system for your city. However, to select another taqweem, follow the steps below:

- 1/ Move to TAQWEEM screen, press **+** several time (see pages 5 & 6)
- 2/ Press and hold **SET** to enter setting mode
- 3/ Use **+** or **-** to select the desired taqweem, then press **SET** to confirm

Main taqweem systems:

MUSLIM LEAGUE, EGYPT, ISNA (North America), HANAFI (Indian sub-continent), UMALQURA and UMALQURA 15° & 18° (to modify Fajr azan), and Fixed 1:30 (where Isha is 1:30 after Magrib and Fajr 1:30 before Shuroq).

NOTE After changing the city, the original taqweem will be re-used.


15

QIBLA DIRECTION

The watch displays Qibla direction relative to North or current Sun/Moon positions, as follows:

- 1/ Move to QIBLA screen, press **+** several time
- 2/ Press and hold **SET** then wait
- 3/ Press **+** to display Qibla direction from North (N) or from Sun (☀) or from Moon (☾).
- 4/ Point the right side arrow **↑** towards the North, Sun* or Moon. In this position, the left side arrow **↖** points to Makkah direction.

* In this case, it is easier to utilize the Sun shade.

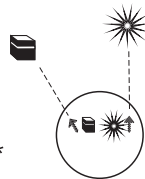

Example

NOTE Qibla direction can always be determined relative North. And it can be determined relative to Sun position (only at daytime) and to Moon position (only at night time). The **↖** icon indicates that the Qibla direction is not available at this time.

ADDING A NEW CITY

12

Any location around the world can be added using latitude, longitude and GMT information. For example, the following steps show how to set the city of Corvallis, in USA located on:

Latitude (**44° 46 N**) and Longitude (**123° 19 E**), and GMT **-8:00**:

- 1/ Follow the steps on pages 1 and 2 to get to country selection
- 2/ Select "USA" then press **SET**
- 3/ Press **+** or **-** to choose NEW CITY then press **SET**
- 4/ Adjust latitude (44 N), press **SET**, adjust minutes (46), then press **SET**
- 5/ Adjust longitude (123 E), press **SET**, adjust minutes (19), and press **SET**
- 6/ Adjust GMT (-8:00) then press **SET**

After the above setting, Qibla direction is displayed and azan times are recalculated for this city.

For more information, please visit: www.alfajr.com/newcity

NOTE If azan times are not correct, check the following: city's coordinates, Gregorian date, DST option, and the appropriate taqweem system.

SAFETY TIME ADJUSTMENT

14

As needed, any azan time can be adjusted forward or backward by a fixed number of minutes, as follows:

- 1/ Move to AZAN SAFETY screen, press **+** several time (see pages 5 & 6)
- 2/ Press and hold **SET** to enter setting mode
- 3/ Use **+** or **-** to adjust safety time of Fajr azan then press **SET**
- 4/ Repeat step 3 for other azan times, as desired.

NOTE Safety times are re-set after selecting another taqweem or city.

MOON AGE

16



This screen displays the Moon age (in days and hours), where the symbol "d" indicates days and the "h" indicates hours. In this example, the current astronomical Moon age is 3 days and 18 hours. You can reach this screen after displaying Qibla direction (see page 15).

QURAN BOOKMARK



Quran bookmark screen displays the last Sura name and Aya number read. To reach this screen, press and hold **+** for 2 seconds. Then, use **+** or **-** to change the bookmark.

NOTE The Aya number is displayed at the middle of the screen, and the Jouza number is displayed at the bottom of the screen.